



**FlowBin**

Cleaning instruction

**Maintenance & cleaning**

# FlowBin

## Cleaning instruction

### General cleaning


Wipe down the dispenser with a wet cloth when needed.

### Cleaning of the hydraulic block

This units needs to be cleaned:

- / Yearly, if the dispenser is used for the same product
- / Whenever the dispensed product is changed

The following instructions shows how to change and clean the **hydraulic block**

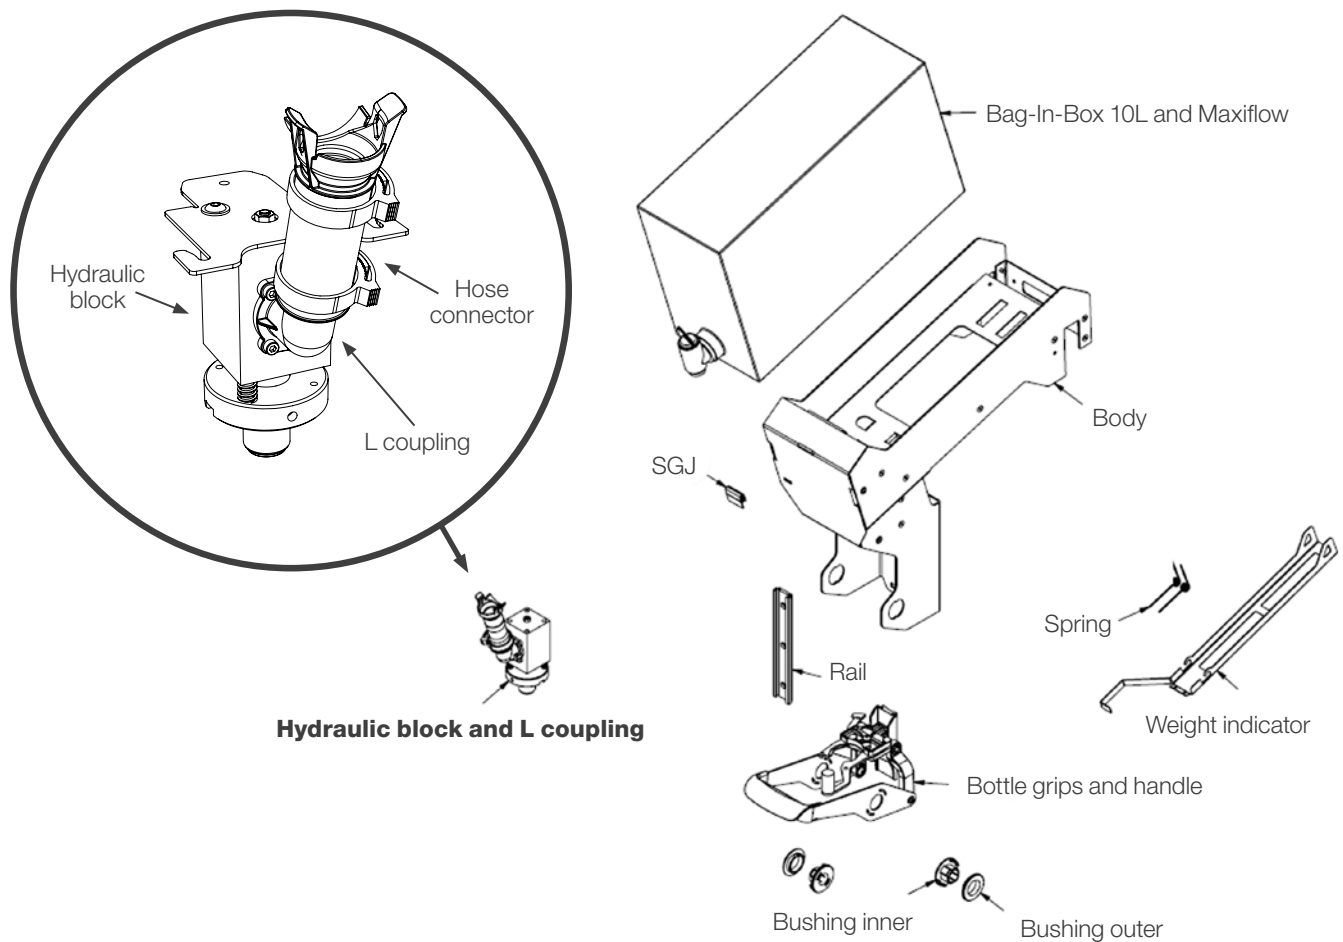

# How to replace and clean the hydraulic block

1 Remove the front.



2 Hang the front below the handle.



3 Close the Maxiflow tap (turn clock-wise) before removing the Bag-in-Box.



4 Unclip the **hose connector** from the Maxiflow tap.



# How to replace and clean the hydraulic block

**5** Remove the Bag-in-Box.



**6** Loosen the 2 wing nuts to release the hydraulic block.



**7** Lift and slide the hydraulic block towards you.



**8** The hydraulic block can now be cleaned or replaced.



# How to replace and clean the hydraulic block

- 9 Press the collar of the hydraulic block so water can flow freely. Flush with warm water for approximately 30 seconds.



- 10 Make sure to empty out any remaining water before mounting the hydraulic block on the FlowBin.



## Assembling

- 1 Slide in the clean hydraulic block into the slot on the FlowBin.
- 2 Make sure that it is pushed all the way to the back and then fasten the 2 wing nuts.
- 3 Install the Bag-in-Box.
- 4 Attach the hose connector to the Maxiflow tap. Make sure you hear a "click" when the connector latches onto the the Maxiflow tap.
- 5 Turn the Maxiflow tap counter clock-wise to allow liquid to flow.
- 6 Re-attach the front & you are ready to go!

**HL DISPLAY AB**

Cylindervägen 18 Box 1118  
131 26 Nacka Strand, Sweden

Tel +46 8 683 73 00

[www.hl-display.com](http://www.hl-display.com)  
[info@hl-display.com](mailto:info@hl-display.com)

