




4eBin™ Gravity bin


Mounting instruction

4eBin[™] Gravity bin - On crossbar with holder

1

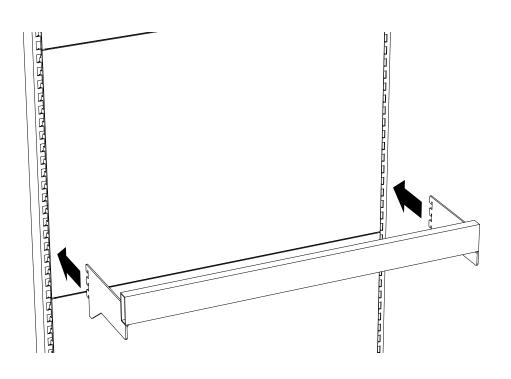


2

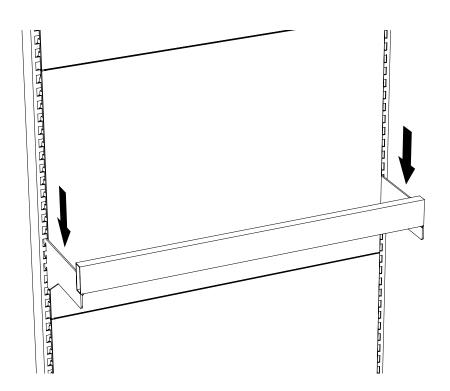


© HL Display 2(11)

3

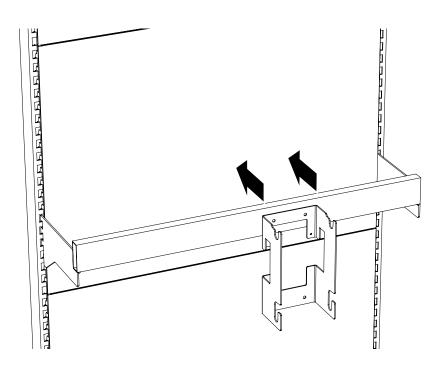


4

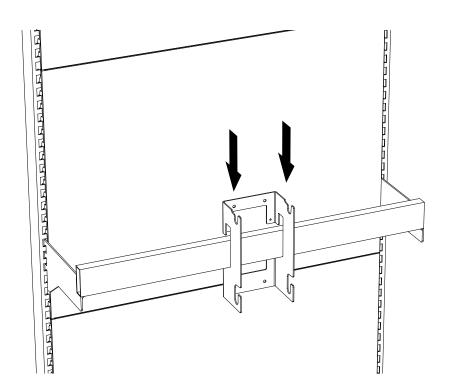


 \odot HL Display 3(11)

5

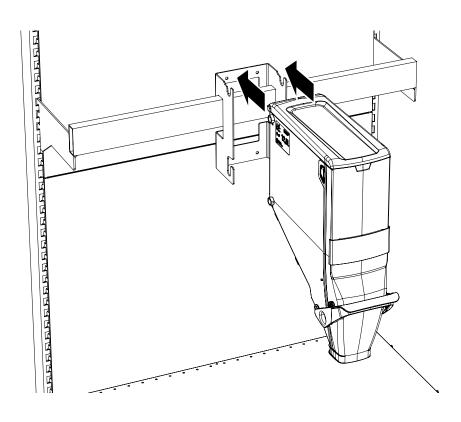


6

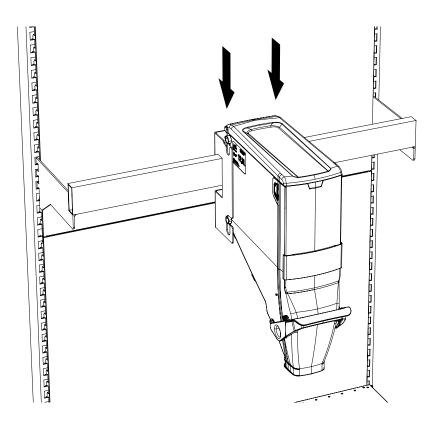


© HL Display 4(11)

4eBin[™] Gravity bin - On crossbar with swing down arms

Place swing down arm (SDA) unto cross bar

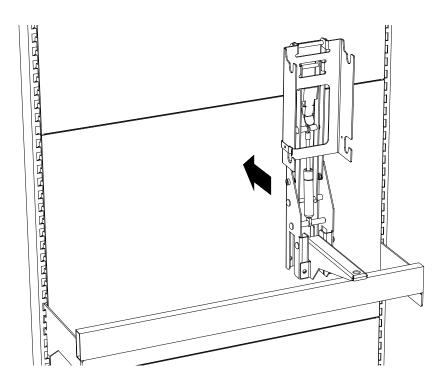


2 SDA drops down and sits over the cross bar

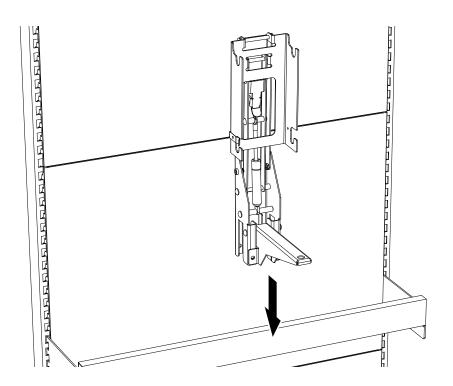


© HL Display 5(11)

4eBin™ Gravity bin - On crossbar with swing down arms

Fix the 2 bolts to secure SDA onto cross bar

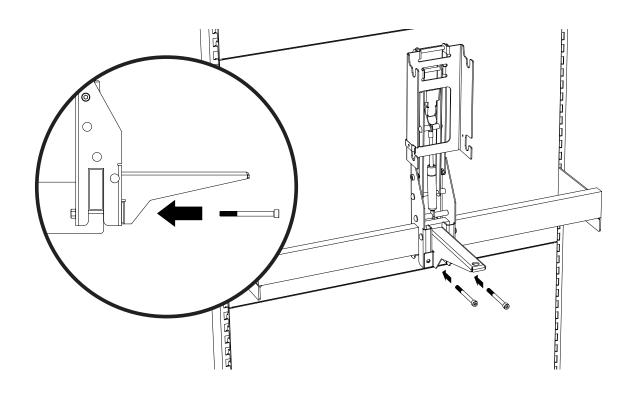


4

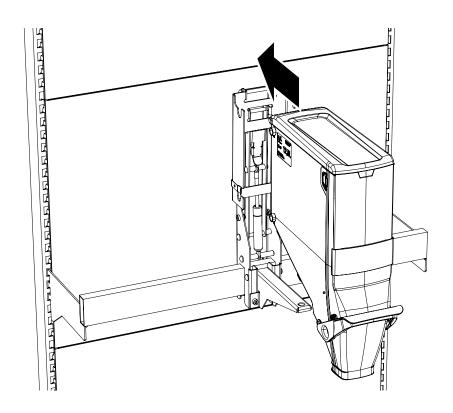

© HL Display 6(11)


5

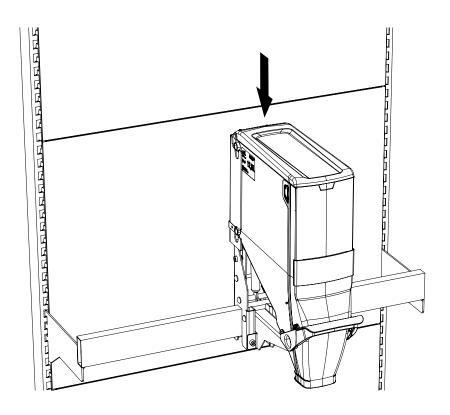


© HL Display 7(11)

4eBin[™] Gravity bin – On a shelf with a mounting fot

Insert two (2) Bin Foots into the profile, and align the front of the foot with the front of the shelf.

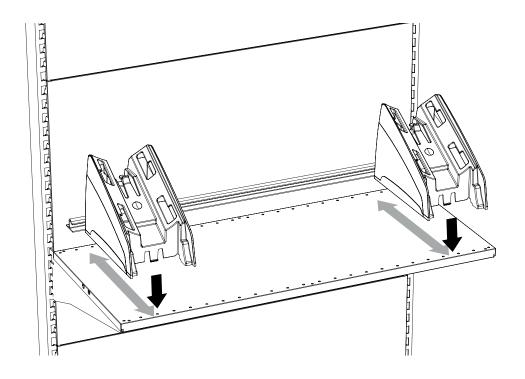


Once the correct depth has been determined, remove the tape and fix the profile to the shelf

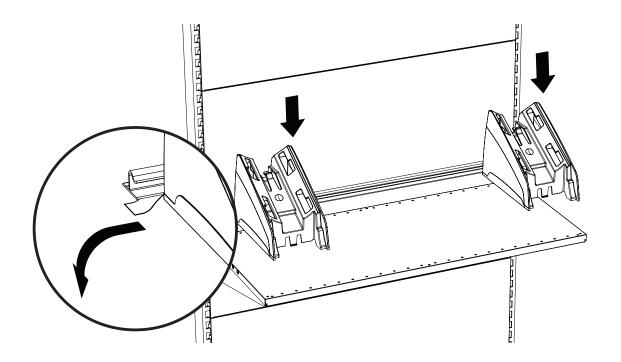


© HL Display 8(11)

4eBin[™] Gravity bin – On a shelf with a mounting fot

Insert the Gravity Bin in into the Bin Foot before attaching it to the profile

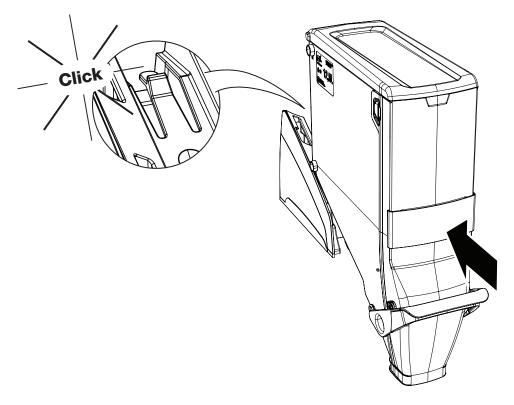


4 Make sure the Bin is securely fixed to the Foot

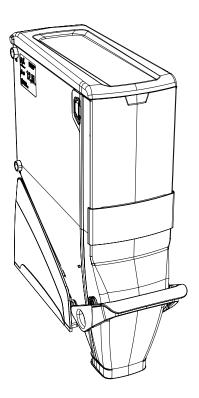


© HL Display 9(11)

4eBin[™] Gravity bin – On a shelf with a mounting fot

Insert the Bin Foot into the profile.

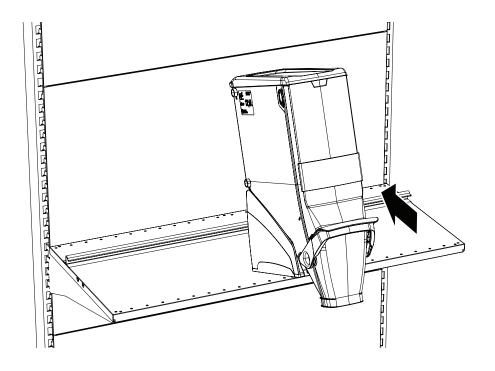

Repeat the same action until all Gravity Bins are in place.

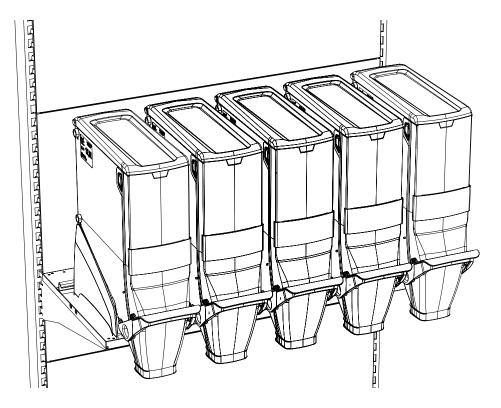

© HL Display 10(11)

