



GlideTrack™
Maintenance & cleaning

Cleaning instruction for GlideTrack™

Maintain freshness and attractive presentation

1. Remove the whole unit from the shelf
2. Wash it in warm water and mild soap
3. Dry and put it back again.

Cleaning

Handwashing is preferable, Use warm water only, **temperature must not exceed 50° C, 120 Fahrenheit.**

Do not use a dishwasher in order to limit exposure to high temperature water.

Use a non-abrasive cloth or sponge only to avoid damage. For particularly stubborn spillages, you can use a mild detergent with warm water, preferably a disinfectant based on Chlorine Dioxide (ClO₂).

TIP – In the event of spillage, cleaning immediately as above is recommended, especially if the spillage has a high sugar content, like soft drinks or dairy.

