



Roller Track™
Maintenance & cleaning



Cleaning instruction for Roller Track™

Maintain freshness and attractive presentation

- 1.** Remove the whole unit from the shelf
- 2.** Wash it in warm water and mild soap
- 3.** Dry and put it back again.

Cleaning

Handwashing is preferable, Use warm water only, **temperature must not exceed 50° C, 120 Fahrenheit.**

Do not use a dishwasher in order to limit exposure to high temperature water.

Use a non-abrasive cloth or sponge only to avoid damage. For particularly stubborn spillages, you can use a mild detergent with warm water, preferably a disinfectant based on Chlorine Dioxide (ClO₂).

TIP – In the event of spillage, cleaning immediately as above is recommended, especially if the spillage has a high sugar content, like soft drinks or dairy.

